



**STREAMLINE**  
TIMBERWORKS

OLD WORLD CRAFTSMANSHIP meets STATE-OF-THE ART TECHNIQUES



FRONT ELEVATION

$\frac{1}{16}'' = 1'-0''$



BACK ELEVATION

$\frac{1}{16}'' = 1'-0''$


SPRUCE CREEK

[www.streamlinetimberworks.com](http://www.streamlinetimberworks.com) • 888.778.8010 phone




**STREAMLINE**  
TIMBERWORKS

OLD WORLD CRAFTSMANSHIP meets STATE-OF-THE ART TECHNIQUES

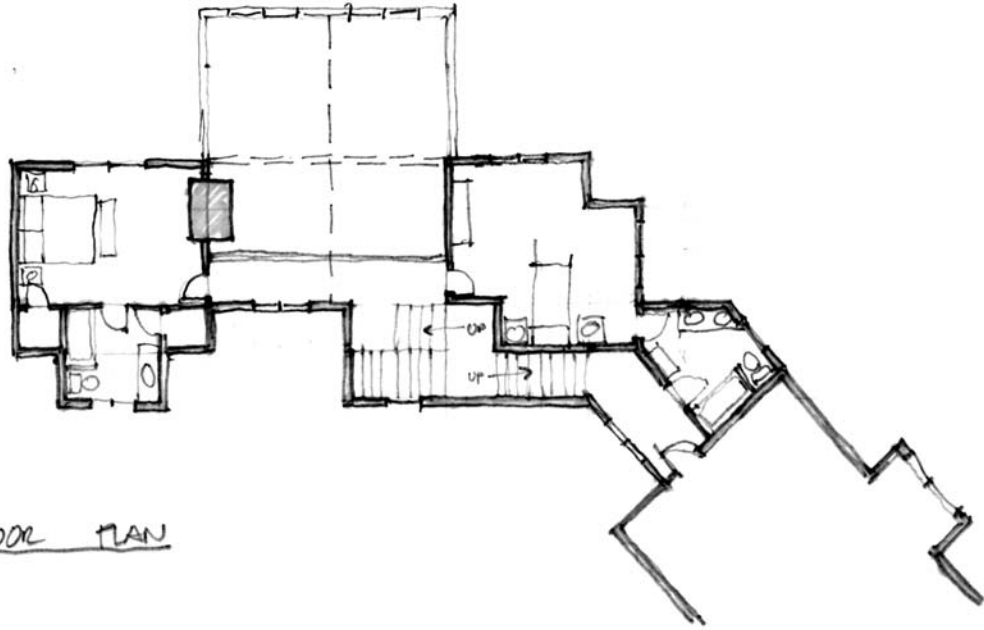

UPPER FLOOR PLAN  
 $\frac{1}{16}'' = 1'-0''$

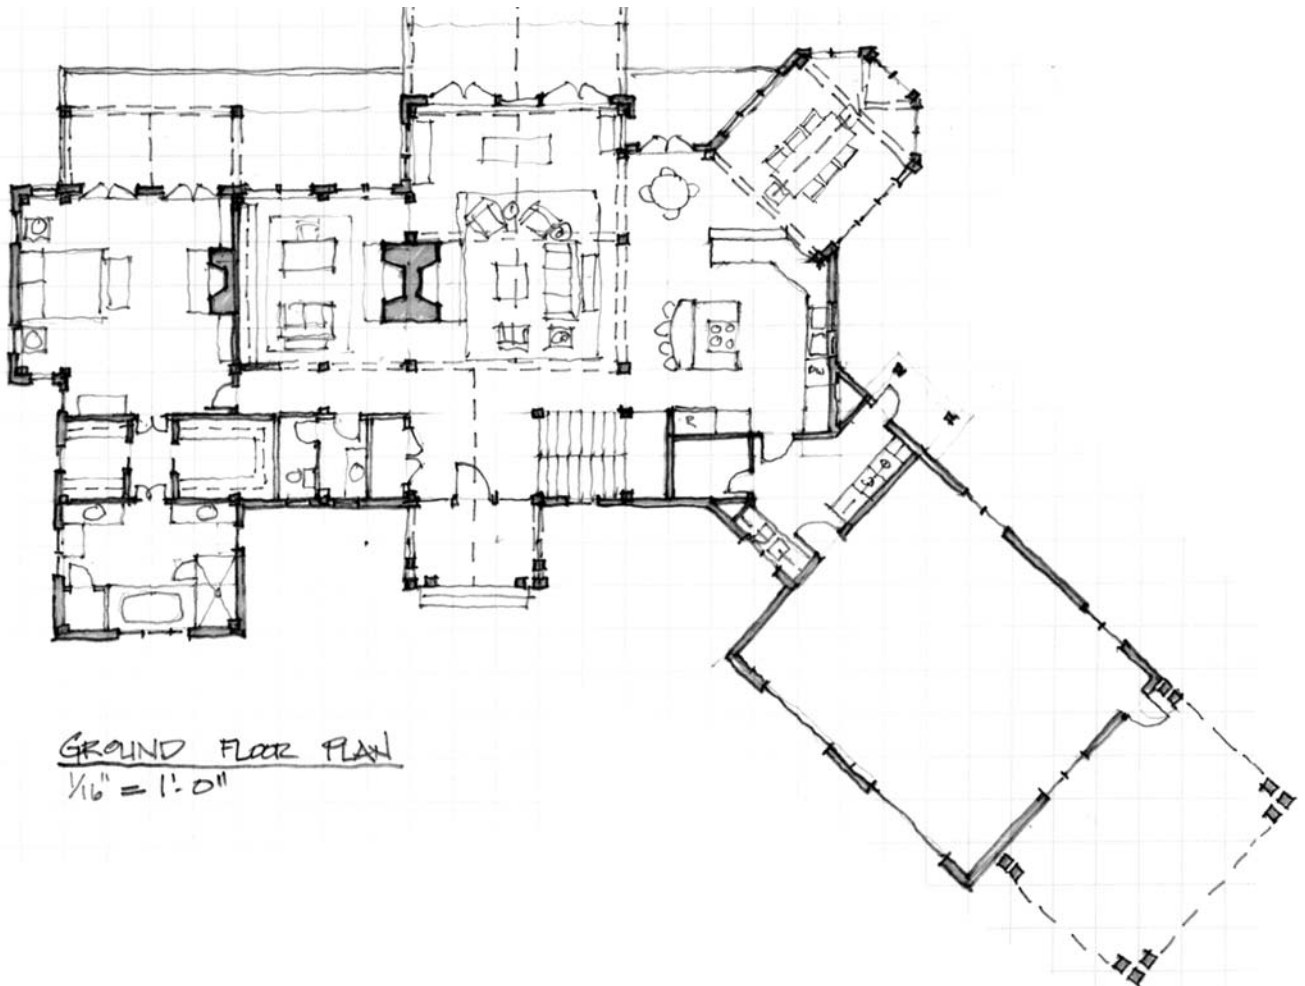

GROUND FLOOR PLAN  
 $\frac{1}{16}'' = 1'-0''$

SPRUCE CREEK

[www.streamlinetimberworks.com](http://www.streamlinetimberworks.com) • 888.778.8010 phone